




# Mr. Coffee TF6 Internal Water Tubes Replacement

This guide provides step-by-step directions on how to replace the water tubes inside the Mr. Coffee TF6.

Written By: Jordan

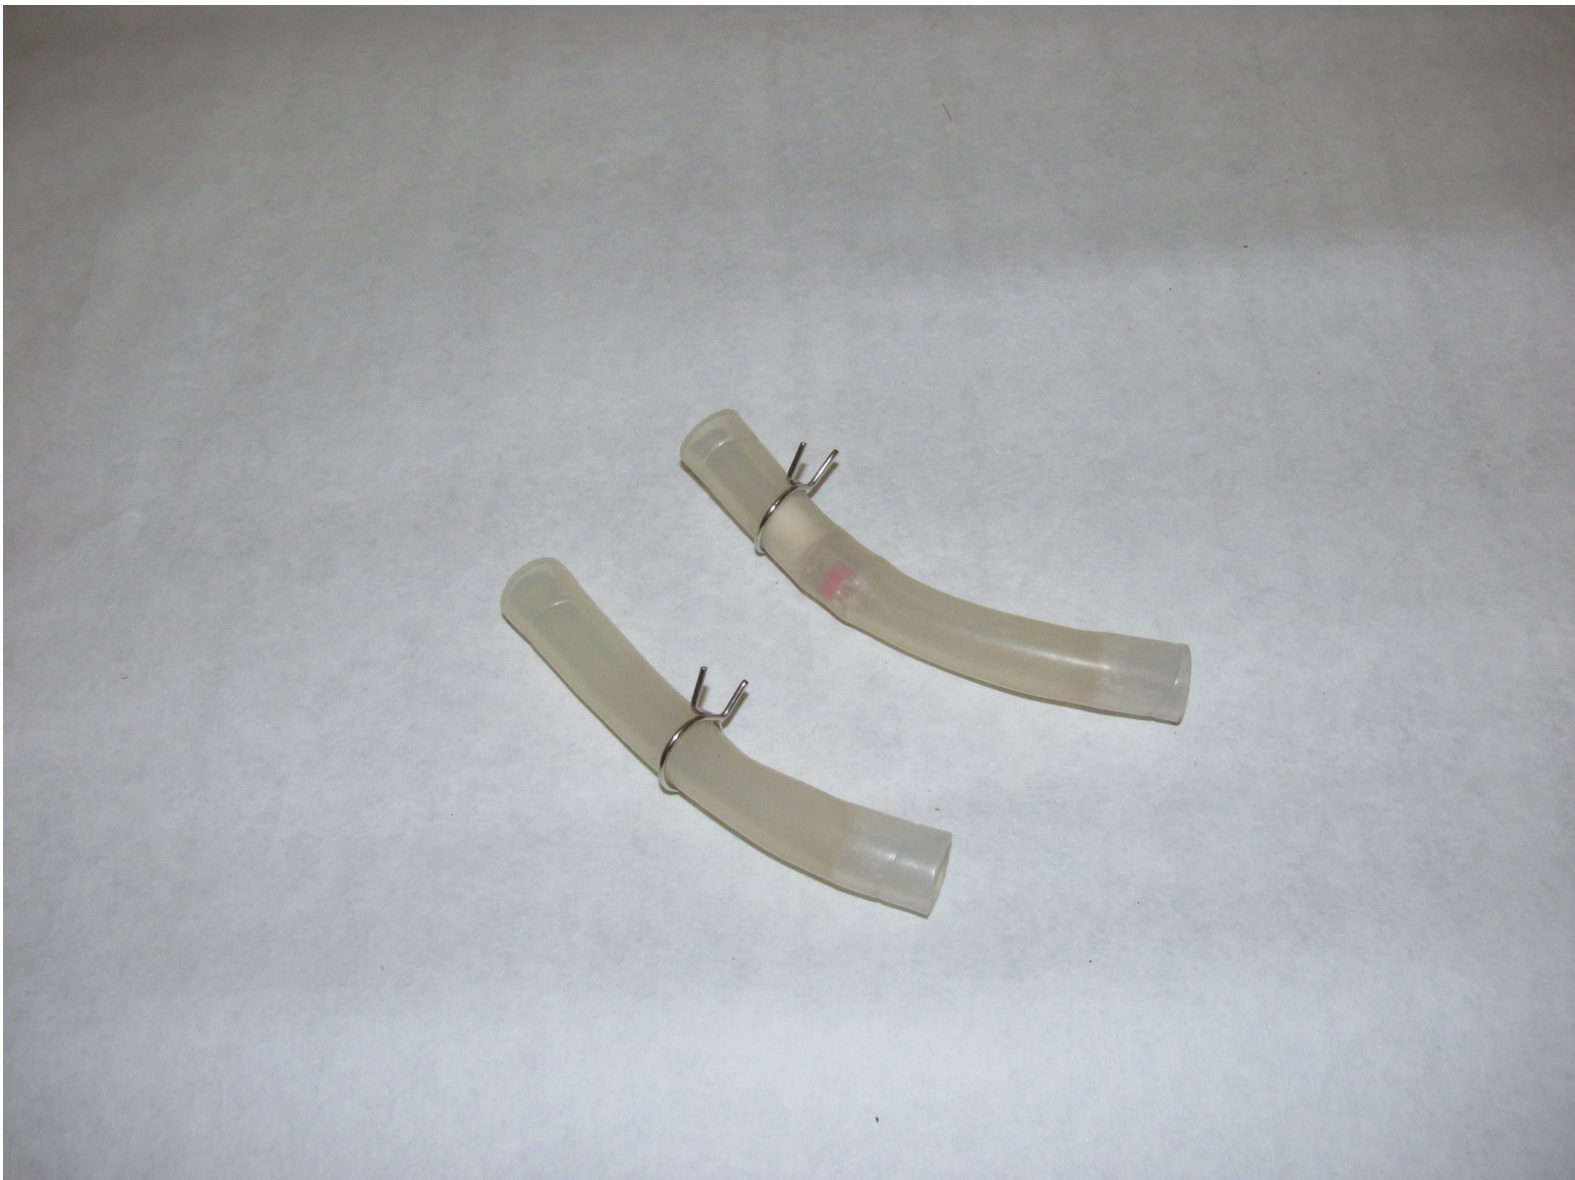

## INTRODUCTION

Leaks can occur within the Mr. Coffee TF6. In most cases, replacing the internal water tubes will correct this issue. You will require 2 inches of silicone tubing (.5 in. OD) to replace the original water tubes inside the TF6.



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)



### PARTS:


- [Silicone Tubing \(.5 in. OD\)](#) (1)

## Step 1 — Bottom Cover



- Facing the bottom of the TF6, carefully pull the two rubber feet out with your hands.

## Step 2

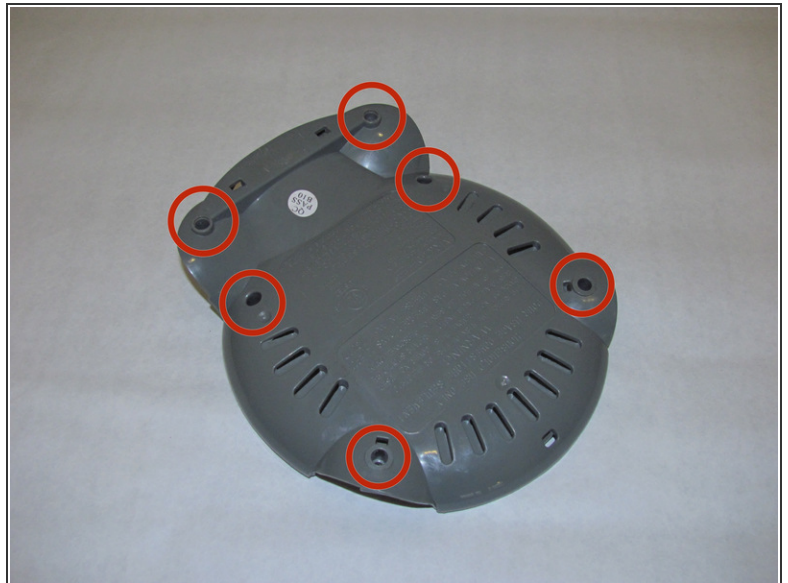

- Using a Phillips #1 screwdriver, remove the six 11mm Phillips screws that are holding the bottom cover in place.




### Step 3




- Gently lift the bottom cover, detaching it from the main body of the TF6.

### Step 4 — Internal Water Tubes

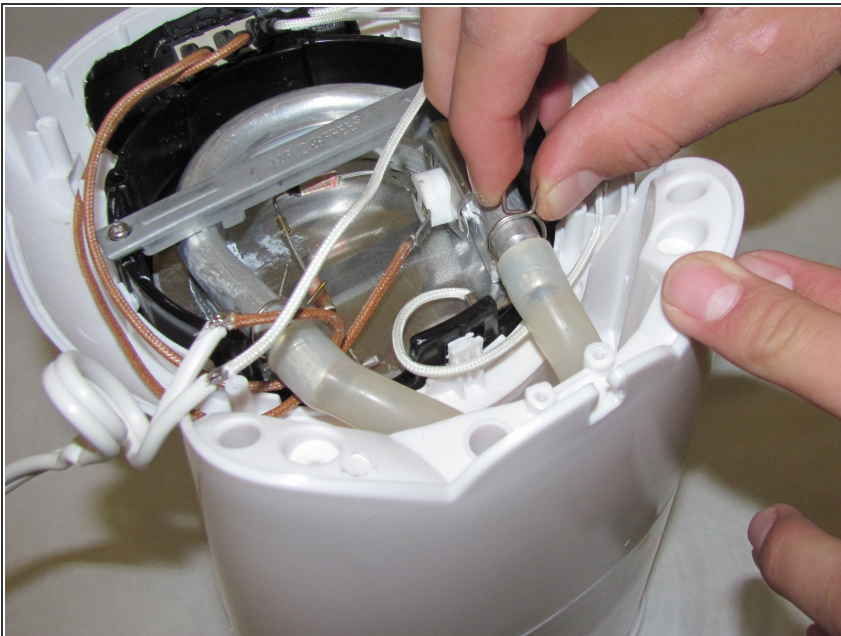


- Using your fingers, gently pinch and detach the two metal clips that secure the silicone tubing to the metal tubing on the TF6.

## Step 5

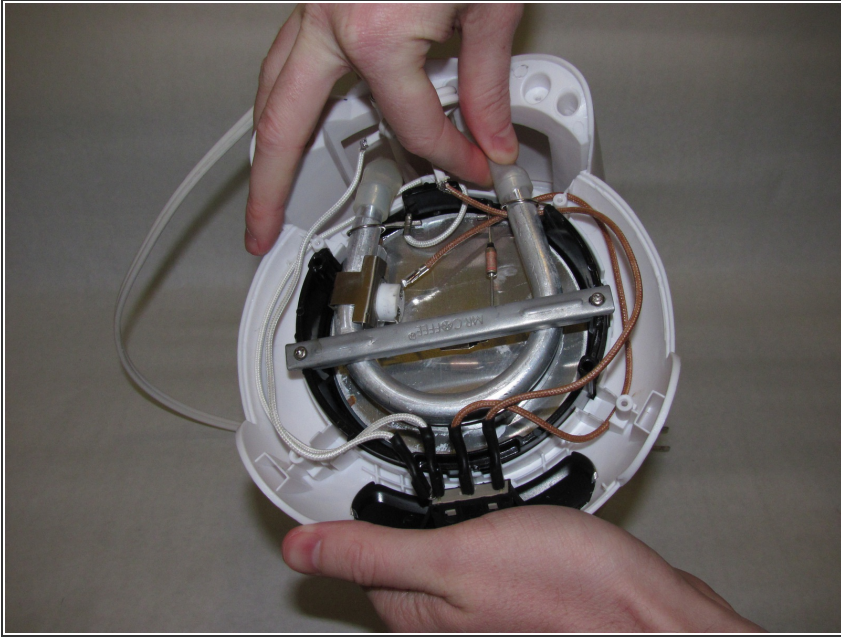

- Carefully pull the silicon tubing off of the metal tubing.

## Step 6

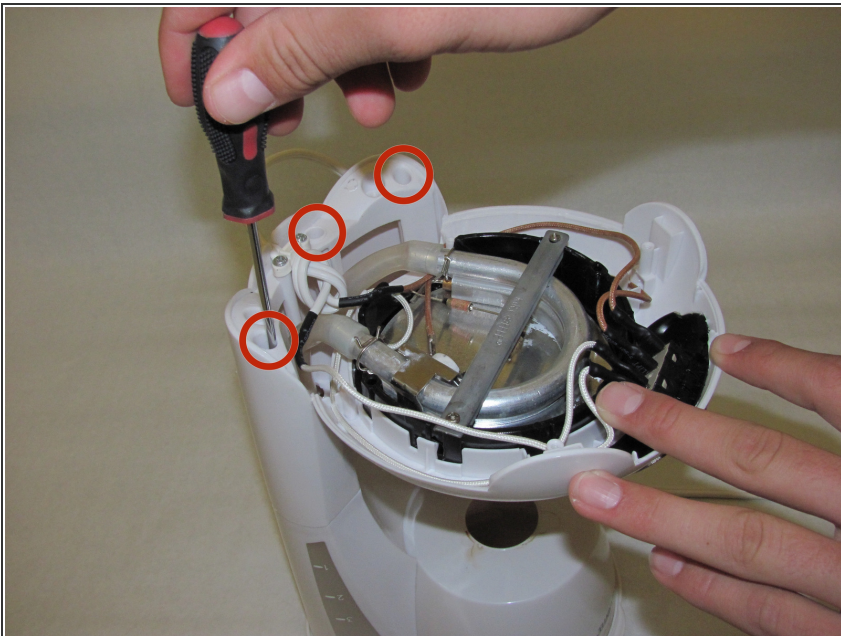

- Using a Phillips #1 screwdriver, remove the three 13mm Phillips screws that hold the lower and upper assemblies together.



## Step 7



- Gripping the lower assembly with one hand and the upper assembly with the other, gently pull the assemblies apart.


**i** If all screws have been removed and the tubes have been detached, the assemblies should separate easily.

## Step 8



- Using your fingers, gently pinch and detach the two metal clips that secure the silicone tubing to the plastic tubes on the upper assembly.

## Step 9

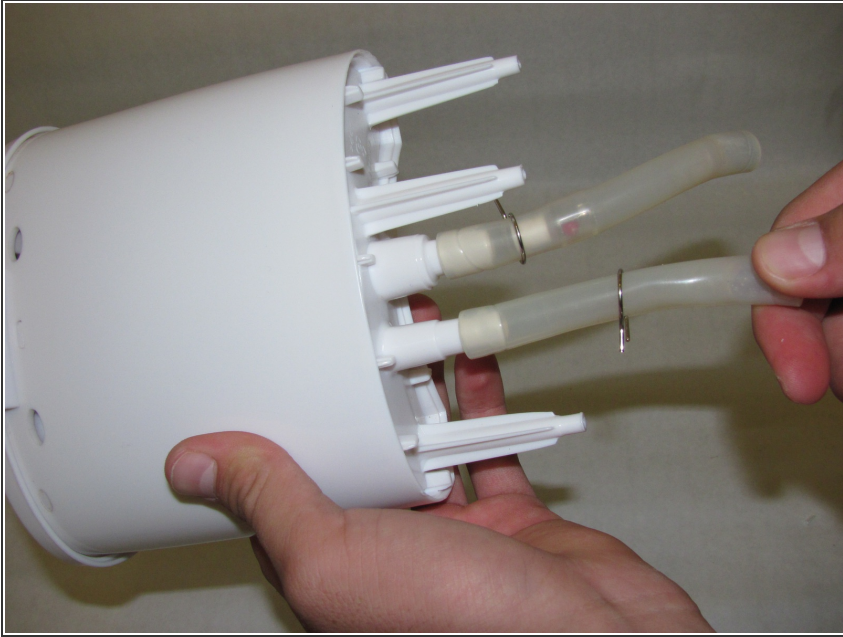

- Carefully pull the silicon tubing off of the plastic tubing on the upper assembly.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 06:52:26 PM.